

BlueStone

Model
BLB-5357

Hướng dẫn sử dụng Máy xay sinh tố



Đa tốc độ xay và chức năng nhồi cho phép xay linh động.

Công suất mạnh đến 1200W, dễ dàng xay nhuyễn nhiều loại thực phẩm.

Thiết kế giảm ồn ưu việt với độ ồn thấp.



Hãy giữ lại Hướng Dẫn Sử Dụng vì sự an toàn của bạn.

CB

- Các sản phẩm và các linh kiện sản phẩm BlueStone đều được sản xuất dựa trên quy trình chuyên nghiệp theo tiêu chuẩn CB về chất lượng và an toàn sản phẩm.
- Bên cạnh đó, các sản phẩm BlueStone đều được kiểm tra chặt chẽ về mẫu mã, dây chuyền sản xuất và kiểm định lô hàng.

Sản phẩm BlueStone được công ty đối tác Mỹ Great American Appliance (GAA Corp) tư vấn về quản lý và quy trình. GAA là công ty được thành lập và hoạt động theo luật pháp Mỹ theo Giấy chứng nhận thành lập số 3089043 do văn phòng thư ký bang California cấp có trụ sở chính tại 7809 Michigan Ave Oakland, CA 94605, Hoa Kỳ.

- Sản phẩm BlueStone được thiết kế theo kiểu dáng công nghiệp với màu sắc đa dạng. Dưới sự nghiên cứu và thiết kế của các chuyên viên thiết kế và kỹ thuật viên chuyên nghiệp, các sản phẩm Blue-Stone được thiết kế theo tiêu chuẩn quốc tế nghiêm ngặt nhằm đáp ứng được nhu cầu ngày càng cao của người tiêu dùng.
- BlueStone luôn coi trọng việc chăm sóc khách hàng. Các sản phẩm BlueStone đều được bảo hành 2 năm.

MỤC LỤC

THÔNG SỐ KỸ THUẬT	4
MÔ TẢ CHUNG	5
CHÚ Ý KHI SỬ DỤNG MÁY	6
CẢNH BÁO	6
CHÚ Ý	7
HƯỚNG DẪN SỬ DỤNG	8
HƯỚNG DẪN VỆ SINH NHANH THIẾT BỊ	10
HƯỚNG DẪN BẢO QUẢN VÀ LƯU GIỮ THIẾT BỊ	10
GHI CHÚ	10
CHUNG TAY BẢO VỆ MÔI TRƯỜNG	10

CONTENTS

SPECIFICATIONS	13
GENERAL DESCRIPTION	14
IMPORTANT	15
WARNING	15
CAUTION	16
USING THE APPLIANCE	17
FAST WASHING	19
MAINTENANCE AND STORAGE	19
NOTE	19
ENVIRONMENT FRIENDLY DISPOSAL	19

- Manufacturer has right to replace technical standard or specification without any notice.
- Tiêu chuẩn kỹ thuật nhà sản xuất có thể thay đổi mà không cần báo trước.

THÔNG SỐ KỸ THUẬT

Model: BLB-5357

Hiệu điện thế: 220-240V ~ 50/60Hz

Công suất: 1200W


Dung tích cối xay: 1.8L

Chất liệu cối xay: thủy tinh



MÔ TẢ CHUNG

BLB-5357

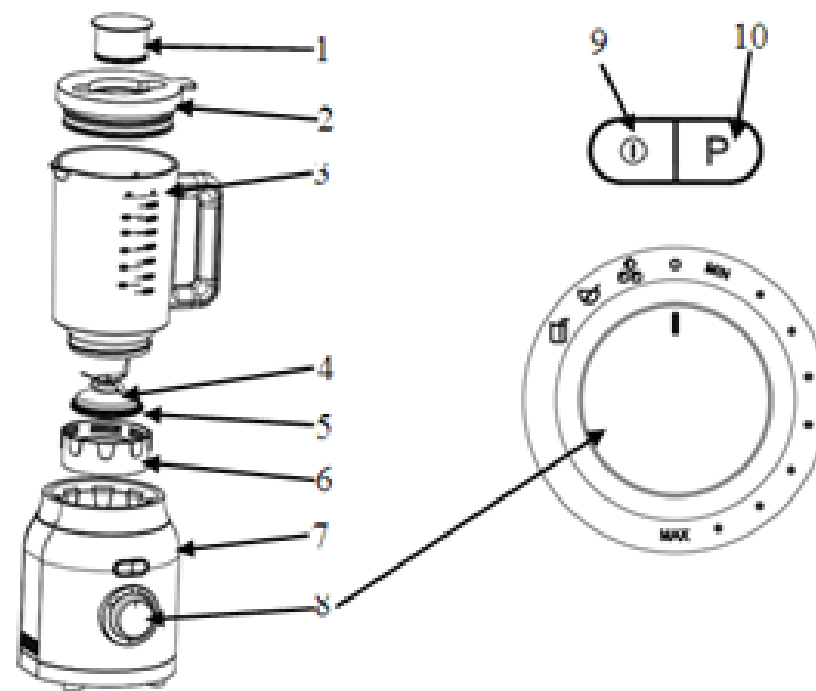

- 1 Nắp tiếp nhận thực phẩm
- 2 Nắp cối xay sinh tố
- 3 Cối xay sinh tố
- 4 Lưỡi dao xay sinh tố
- 5 Vòng đệm
- 6 Đế cối xay

- 7 Thân máy
- 8 Nút điều chỉnh
- 9 Nút nguồn
- 10 Nút nhồi

CHÚ Ý KHI SỬ DỤNG MÁY

- Vui lòng đọc kỹ hướng dẫn trước khi sử dụng và cất giữ để tham khảo về sau.

CẢNH BÁO

- 1 Kiểm tra xem điện áp ghi trên máy có tương ứng với điện áp nguồn nơi sử dụng trước khi nối máy với nguồn điện.
- 2 Đảm bảo đã ngắt nguồn trước khi tháo gỡ, cài đặt, tháo máy hay di chuyển máy.
- 3 Trước khi thiết bị vận hành, kiểm tra các dây cắm, lưỡi dao và các thành phần khác. Nếu thấy bất cứ thành phần đã bị hư hại, hãy ngừng sử dụng thiết bị và liên hệ với trung tâm dịch vụ bảo hành để thay thế và sửa chữa các phụ tùng hư hay sự cố về máy. Vui lòng không tháo rời và tự sửa chữa sản phẩm để đảm bảo an toàn.
- 4 Không được sử dụng bất kỳ phụ tùng nào của nhà sản xuất khác. Nên sử dụng phụ tùng đi kèm với máy của chính nhà sản xuất cung cấp.
- 5 Để tránh nhiễu mạch điện, các sự cố về điện (điện giật, chập điện...) và những tai nạn khác, không nhúng dây điện, phích cắm, thân máy vào nước hoặc các chất lỏng khác.
- 6 Luôn tháo phích cắm khỏi ổ điện sau khi sử dụng, xin nắm đầu phích điện để rút ra khỏi ổ cắm điện, không nắm dây điện mà giật để khỏi hư dây điện.
- 7 Đừng tự ý sửa chữa nếu không biết rõ vì điện áp cao trong vỏ thiết bị.
- 8 Lắp ráp các bộ phận phải đúng, khớp và đầy đủ trước khi sử dụng thiết bị.
- 9 Khi máy đang hoạt động, để tránh nguy hiểm, không được dùng tay hay các vật lạ để lấy thực phẩm hoặc lơ là khi lấy thực phẩm ra khỏi máy.
- 10 Để tóc, quần áo, đồ dùng, dụng cụ tránh xa các bộ phận nóng của máy.
- 11 Khi máy đang làm việc không được chạm tay vào bất kỳ bộ phận có thể tháo rời khỏi máy.
- 12 Nếu dây nguồn bị hỏng thì phải do nhà chế tạo hoặc đại lý dịch vụ hoặc những người có trình độ tương đương thay thế nhằm tránh xảy ra sự cố.

CHÚ Ý

- 1 Trong suốt quá trình hoạt động nếu thiết bị đột ngột dừng lại, đó có thể do sự tác động hệ thống bảo vệ nhiệt cho motor. Nếu gặp trường hợp này vui lòng tắt máy và chờ trong vòng 20 đến 30 phút rồi cho máy hoạt động trở lại.
- 2 Ngắt điện trước khi vệ sinh thiết bị.
- 3 Để tránh thiệt hại, tất cả các bộ phận của thiết bị không được phép sử dụng với nước nóng trên 60°C hay lò vi sóng để khử trùng, các thành phần có tiếp xúc với thực phẩm đều phù hợp với các chứng thực nhận an toàn vệ sinh thực phẩm và đáng tin cậy.
- 4 Trước khi vận hành máy cần loại bỏ hạt, lớp vỏ dày và cắt nhỏ thực phẩm.
- 5 Sử dụng lưỡi dao phù hợp với thiết bị.
- 6 Lưỡi dao phải được lắp ráp phù hợp với cối xay chính trước khi lắp vào thân máy.
- 7 Không vận hành máy khi không có thực phẩm trong cối xay chính và không tháo nắp đậy cho đến khi dao ngừng quay hẳn.
- 8 Cần thêm nước hoặc sữa vào ly để tăng hiệu quả xay hay trộn đồng thời kéo dài tuổi thọ cho sản phẩm.
- 9 Không được vệ sinh thiết bị bằng máy rửa chén.
- 10 Cần thận với lưỡi dao và các bộ phận cắt của thiết bị trong khi vận hành và vệ sinh.
- 11 Không vệ sinh thân máy trực tiếp bằng nước mà phải dùng khăn ướt, bàn chải mềm hay bọt biển để lau chùi.
- 12 Không được vệ sinh sản phẩm bằng tấm rửa kim loại, chất tẩy rửa hay chất lỏng có tính ăn mòn (ví dụ như khí hay Acetone).
- 13 Khi thiết bị đang hoạt động gần trẻ em cần phải có sự giám sát chặt chẽ của người lớn. Tuyệt đối không cho trẻ em sử dụng thiết bị này.
- 14 Thiết bị được thiết kế chỉ để dùng trong gia đình.
- 15 Người thiếu năng và trẻ em không được sử dụng thiết bị này, trừ khi có người giám sát và chịu trách nhiệm về sự an toàn của họ.
- 16 Trẻ con nên được giám sát để chúng không chơi đùa với thiết bị này.

HƯỚNG DẪN SỬ DỤNG

A SỬ DỤNG LẦN ĐẦU TIÊN

- 1 Mở bao bì đóng gói và đặt các bộ phận trên một bề mặt phẳng.
- 2 Nhúng cối xay, nắp đậy, nắp tiếp nhận thực phẩm vào nước ấm có pha xà bông, rửa sạch và lau khô. Không bao giờ nhúng thân máy vào nước để tránh các rủi ro về giật điện.
Cảnh báo: lưỡi dao rất sắc, phải rất cẩn thận khi thao tác.
- 3 Cách lắp ráp đúng sẽ được miêu tả chi tiết như bên dưới
Trước khi lắp đặt, cần chắc chắn là dây nguồn đã được rút khỏi nguồn điện và nút điều khiển tốc độ ở vị trí "0".
Để lắp cối xay vào thân máy, đầu tiên đặt cối xay lên thân máy một cách ngay ngắn.

Lưu ý: Phải chắc rằng cối xay được lắp chắc chắn vào thân máy. Nếu cối không được lắp đúng vị trí, máy xay sinh tố sẽ không hoạt động được.

B XAY TRÁI CÂY VÀ RAU CỦ

- 1 Trước khi cắm dây nguồn và nguồn điện, cần chắc chắn nút điều khiển tốc độ nằm ở vị trí "0".
- 2 Sau khi rửa sạch, bóc vỏ trái cây và rau củ, cắt thành những miếng nhỏ và cho vào cối xay. Thêm nước để máy hoạt động dễ dàng hơn. Tỷ lệ giữa thực phẩm và nước là 2:3. Lượng thực phẩm cần xay không nên vượt quá mức tối đa được ghi trên cối xay.

Lưu ý:


Không bao giờ đun sôi chất lỏng hoặc xay không có thực phẩm. Cối xay có thể dùng để xay đá.

Thêm các nguyên liệu là chất lỏng trước, sau đó mới thêm các nguyên liệu cứng. Điều này sẽ tăng độ bền của máy và ngăn sự quá tải không cần thiết cho mô tơ.

- 3 Đặt nắp đậy lên trên cối xay. Chỉ cần đặt thẳng nắp đậy vào cối xay.
- 4 Vận nút điều khiển tốc độ tới mức độ mong muốn. Vị trí Min là tốc độ thấp nhất, vị trí Max là tốc độ cao nhất. Nhấn nút nguồn để máy hoạt động. Nút nhồi "P" là chức năng nhồi. Nhấn nút và giữ nút "P" để sử dụng chức năng. Chế độ nhồi giúp tạo ra một lực mạnh để xay nhanh chóng và hiệu quả.

- 5 Bạn có thể thêm các nguyên liệu khác vào cối xay trong lúc xay thông qua nắp tiếp nhận thực phẩm. Sau đó đậy nắp tiếp nhận thực phẩm vào nếu cần thiết.
- 6 Thời gian vận hành liên tục của máy không nên vượt quá 1 phút. Máy cần nghỉ ít nhất 3 phút giữa 2 lần xay.
- 7 Vận nút điều khiển tốc độ về vị trí 0 hoặc nhấn nút nguồn khi hỗn hợp đã được xay nhuyễn như mong muốn.
- 8 Lấy cối xay ra khỏi thân máy, cẩn thận mở nắp đậy và đổ sinh tố ra.


C CHỨC NĂNG XAY ĐÁ

- 1 Vận nút điều khiển đến vị trí xay đá. 
- 2 Nhấn nút Nguồn, máy sẽ bắt đầu chạy và tự động tắt sau 1 phút.
- 3 Để tắt máy sớm hơn, nhấn nút nguồn hoặc vận nút điều chỉnh về vị trí "0".
- 4 Thời gian vận hành liên tục của máy không nên vượt quá 1 phút. Máy cần nghỉ ít nhất 3 phút giữa 2 lần xay.


Lưu ý:

Thêm các nguyên liệu là chất lỏng vào cối xay trước khi sử dụng chức năng này.

D CHỨC NĂNG XAY SÚP

- 1 Vận nút điều khiển đến vị trí xay súp 
- 2 Nhấn nút Nguồn, máy sẽ bắt đầu chạy và tự động tắt sau 1 phút.
- 3 Để tắt máy sớm hơn, nhấn nút nguồn hoặc vận nút điều chỉnh về vị trí "0".
- 4 Thời gian vận hành liên tục của máy không nên vượt quá 1 phút. Máy cần nghỉ ít nhất 3 phút giữa 2 lần xay.

E CHỨC NĂNG XAY SINH TỐ

- 1 Vận nút điều khiển đến vị trí xay sinh tố 
- 2 Nhấn nút Nguồn, máy sẽ bắt đầu chạy và tự động tắt sau 1 phút.
- 3 Để tắt máy sớm hơn, nhấn nút nguồn hoặc vận nút điều chỉnh về vị trí "0".
- 4 Thời gian vận hành liên tục của máy không nên vượt quá 1 phút. Máy cần nghỉ ít nhất 3 phút giữa 2 lần xay.

HƯỚNG DẪN VỆ SINH NHANH THIẾT BỊ

Thêm một ít nước vào cối, lắp lưỡi dao vào cối, đặt cối vào thân máy sau đó cắm điện, nhấn nút "P" và để máy hoạt động một lúc sau đó ngưng và rút dây nguồn, lấy cối ra, tháo lưỡi dao, đổ nước trong cối đi và lau chùi sạch bằng vải mềm.

HƯỚNG DẪN BẢO QUẢN VÀ LƯU GIỮ THIẾT BỊ

- 1 Trước khi vệ sinh máy cần phải tắt máy và rút dây nguồn.
- 2 Vệ sinh máy ngay sau khi sử dụng.
- 3 Không vệ sinh phần thân máy trực tiếp bằng nước mà phải dùng vải ướt, bàn chải mềm hay bọt biển.
- 4 Giữ máy nơi khô thoáng và tránh ánh sáng trực tiếp.

GHI CHÚ**KHÔNG ĐƯỢC TỰ CHỈNH SỬA SẢN PHẨM**

Vui lòng liên lạc với trung tâm bảo hành để sửa chữa.

CHUNG TAY BẢO VỆ MÔI TRƯỜNG

Hãy tuân thủ những quy định bảo vệ môi trường của địa phương: đem những thiết bị điện không còn sử dụng đến trung tâm xử lý chất thải phù hợp.

BlueStone

Model
BLB-5357

User manual Blender



Variable speed dial and Pulse function allow for flexibility and creativity along with refreshing recipes.

High power 1200W, blend different kinds of fruit juice easily.

Compact and ultra-low noise.



Always keep manual for your safety

CB

- **Standard Compliance**

BlueStone products are manufactured under the Standards and the technical rules for product safety design and testing.

BlueStone products and associated accessories intended for professional, industrial-process under CB and have been successfully tested on areas: sampling test, assembling test and lot test.

- **Trademark**

BlueStone manufactured products are based on the consultation by Great American Appliance (GAA Corp) a company incorporated and existing under the laws of United States of America under Certificate of Incorporation No. 3089043 in the secretary office located in the state of California in Michigan, Ave Oakland, CA 94605, USA.

- **Industrial design**

Bluestone provides products with industrial design and color variations offering a broad range of possibilities for customers. Through the experienced designers and technicians, Bluestone design has highly reliable solutions so the customers are assured of quality designed systems that meet stringent industry and international compliance regulations.

- **After sales service**

After sales service is considered by BlueStone as a major concern for our customers. With such, we provide our BlueStone products with a 2 years guaranteed warranty that help our end user feel at ease.

SPECIFICATIONS

Model: BLB-5357

Voltage: 220-240V ~ 50/60Hz

Power: 1200W


Jar cup capacity: 1.8L

Jar cup material: Glass



GENERAL DESCRIPTION

BLB-5357

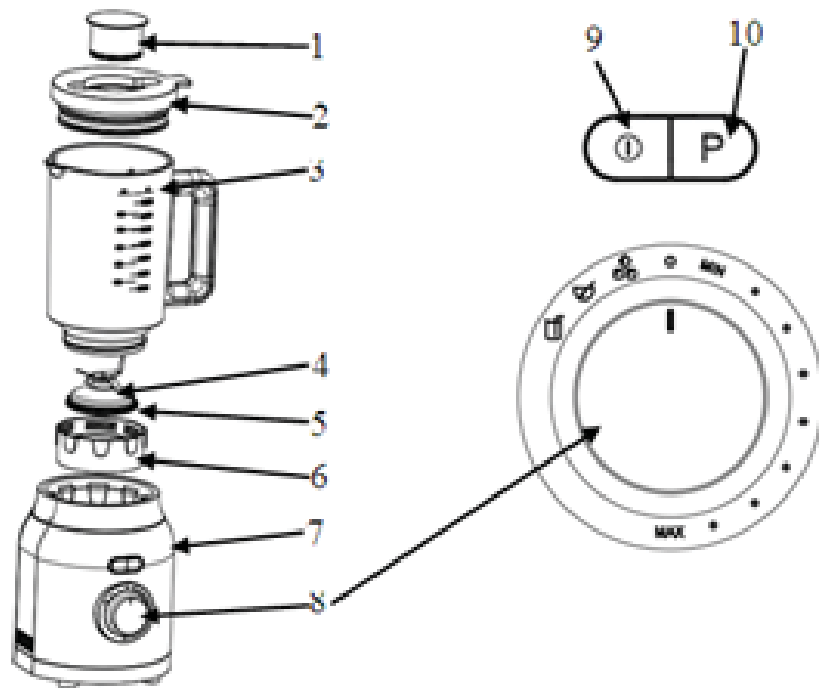

- | | |
|---|----------------|
| 1 | Measuring cup |
| 2 | Top cover |
| 3 | Glass jar |
| 4 | Blade assembly |
| 5 | Sealing ring |
| 6 | Cup holder |

- | | |
|----|-------------------|
| 7 | Power base |
| 8 | Rotary switch |
| 9 | Start/stop button |
| 10 | Pulse button |

IMPORTANT

- Read these instructions carefully before using the appliance and keep them for future reference.

WARNING

- 1 Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- 2 Make sure to cut off the power when dismantle, install or debug the appliance.
- 3 Before operating the appliance, please check the cord or plug, blade, and other components. If any component has been damaged, please discontinue use the appliance and contact service center for replacing any damaged parts. Please don't disassemble and repair by yourself for safety.
- 4 Never use any accessories or parts from other manufactures.
- 5 To protect against electrical shocks or other accidents, do not immerse the electrical cord, plug or motor housing in the water and other liquid.
- 6 Always unplug the appliance after using. Do not unplug by pulling on the cord.
- 7 Do not repair by yourself if you are unclear about this appliance because of high voltage inside.
- 8 Assemble all parts rightly and completely, before using the appliance.
- 9 When the appliance is working, to avoid accidents, it's forbidden to put your hand or other object into food opening, or close your eyes to the feed opening.
- 10 Keep hair, clothes and other utensils away from heated parts of the appliance.
- 11 Do not touch any removable part when it is working.
- 12 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazards.

CAUTION

- 1 If the appliance stops suddenly during its working, it maybe because of the temperature protector of the motor, please shut down the power and wait for 20-30 minutes.
- 2 Shut down the power before cleaning the residue mug.
- 3 In order to avoid damage, all the component are not allowed to use hot water over 60°C or microwave heating for disinfection, the components which contact food conform to the certificate of food hygiene and safety, and reliability.
- 4 Please remove nuclear, hard seeds, thick skin or scale of fruits and vegetables before operating.
- 5 Using right blades that are suitable with the appliance.
- 6 Don't assemble only the blade on main body (the jar cup/the jar cup needs to be revolved need to be revolved tightly to the blade base in advance).
- 7 Never turn blender on with empty jar cup and do not remove the lid until the blade stops turning completely.
- 8 When mixing, it is suggest to adding some water or milk into the jar cup/grinder cup for better result and prolong product life.
- 9 Don't clean this appliance by dishwasher.
- 10 Maximum care with the blades and other cutting parts of the appliance during operation and cleaning.
- 11 The main body is not allowed to clean with water directly; wet cloths, soft brush or sponge can scrub it.
- 12 Don't use steel velvet, abrasive cleansers or corrosive liquid (for example Gas or Acetone) to clean this appliance.
- 13 Close supervision is necessary when the appliance is operated near children. Do not allow children to use this appliance.
- 14 This appliance is intended for household use only.
- 15 The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 16 Children should be supervised to ensure that do not play with the appliance.

USING THE APPLIANCE**A FOR THE INITIAL USE**


- 1 Unpack the appliance and place all parts on a horizontal surface.
- 2 Immerse jar, top cover, measuring cup in warm soapy water and rinse them and dry. Never immerse motor unit in water for cleaning to prevent the risk of electric shock.
Caution: *the blade is very sharp, handle with great care.*
- 3 The correct assembly way will be described in detail in below sections. Before assembling the jar, be sure the power cord is unplugged from the power outlet and the speed selector is on the "0" position. For attaching jar, firstly place the jar into the motor unit properly.
Note: *make sure the jar is assembled into the motor unit properly, if the jar is not assembled properly, the blender will not operate.*

B BLENDING FRUIT AND VEGETABLE

- 1 Before attaching the power cord into the outlet, make sure the speed selector is in the "0" position.
- 2 Peel or core the fruit or vegetables and then cut it into small dices, put the food piece into the jar. Usually certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the jar.
Note:
*Never use boiling liquids or run the appliance empty. The jar can be used for breaking up ice.
Add liquid ingredients first, and then follow with solid ingredients. This will provide more consistent blending and prevent unnecessary stress on the motor*
- 3 Replace the top cover on the jar. Only directly place the top cover into the jar.
- 4 Turn the speed selector to the desired setting. The Min setting is the lowest speed, the Max setting is the highest speed. Press Start/stop button for operation.
The "P" button is Pulse mode. Hold it to pulse actuate motor for delicate chopping. The Pulse mode allows you to create a burst of power for quick, efficient blending.


- 5 You may add ingredient into the jar through the center opening of top cover during operation, then replace Measuring Cup if necessary.
- 6 The consecutive operation time shall not exceed 1 minute, at least 3 minute rest time must be maintained between two continuous cycles.
- 7 Turn the Speed selector to "0" Position or press Start/stop button once the mixture has been blended to your desired consistency.
- 8 Remove the jar from the Motor Unit, carefully take down the top cover, then pour and serve.

C ICE CRUSHING


- 1 Turn rotary switch anti-clockwise to the ice crystal icon. 
- 2 Press «start/stop» button; program starts to run and ends automatically.
- 3 To stop earlier press «start/stop» button again or turn rotary switch to «0» position.
- 4 The consecutive operation time shall not exceed 1 minute, at least 3 minute rest time must be maintained between two continuous cycles.

Note: Add liquid ingredients before using this function.

D SOUP

- 1 Turn rotary switch anti-clockwise to the soup icon. 
- 2 Press «start/stop» button; program starts to run and ends automatically.
- 3 To stop earlier press «start/stop» button again or turn rotary switch to «0» position.
- 4 The consecutive operation time shall not exceed 1 minute, at least 3 minute rest time must be maintained between two continuous cycles.

E SMOOTHIE

- 1 Turn rotary switch anti-clockwise to the soup icon. 
- 2 Press «start/stop» button; program starts to run and ends automatically.
- 3 To stop earlier press «start/stop» button again or turn rotary switch to «0» position.
- 4 The consecutive operation time shall not exceed 1 minute, at least 3 minute rest time must be maintained between two continuous cycles.

FAST WASHING

Add some water in the cup, screw the blade base tightly onto the cup, mount to the main body, connect electric source, press the button "P", then, the appliance starts to work automatically for a while, and then stop working, shut down the power, remove the cup, unscrew the blade, pour out the water, wipe up with soft cloth.

MAINTENANCE AND STORAGE

- 1 Please make sure to press the button off and shut down the power before cleaning the appliance.
- 2 Please clean the machine at right after using.
- 3 The main body is not allowed to clean with water directly; wet cloths, soft brush or sponge can scrub it.
- 4 Please keep the appliance dry and avoid the ultraviolet radiation when storing.

NOTE

DO NOT TRY TO ADJUST OR REPAIR THIS APPLIANCE BY YOURSELF

Please contact a qualified technician or after sales service center for repair.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to appropriate waste disposal center.