

BlueStone

Model
AFB-5870

Hướng dẫn sử dụng Nồi chiên không dầu



Công nghệ chiên Rapid Air giúp giảm 80% lượng dầu mỡ dư thừa mà không làm mất đi hương vị của món ăn

Hệ thống đèn báo và bộ hẹn giờ 30 phút giúp việc chế biến dễ dàng, chính xác hơn

Dung tích 5L, lòng nồi dễ dàng tháo rời để vệ sinh



Hãy giữ lại Hướng Dẫn Sử Dụng
vì sự an toàn của bạn

CB RoHS

- Các sản phẩm và linh kiện BlueStone hầu hết được sản xuất dựa trên quy trình chuyên nghiệp theo tiêu chuẩn RoHS (Restriction of Hazardous Substances), tiêu chuẩn CB về chất lượng và an toàn sản phẩm.
- Sản phẩm bếp từ BlueStone được kiểm tra chặt chẽ về mẫu mã, dây chuyền sản xuất và kiểm định lô hàng (theo tiêu chuẩn của Mỹ).
- Sản phẩm BlueStone được công ty đối tác Mỹ Great American Appliance (GAA Corp) tư vấn về quản lý và quy trình. GAA là công ty được thành lập và hoạt động theo luật pháp Mỹ theo Giấy chứng nhận thành lập số 3089043 do văn phòng thư ký bang California cấp có trụ sở chính tại 7809 Michigan Ave Oakland, CA 94605, Hoa Kỳ.
- Sản phẩm BlueStone được thiết kế theo kiểu dáng công nghiệp với màu sắc đa dạng. Dưới sự nghiên cứu và thiết kế của các chuyên viên thiết kế và kỹ thuật viên chuyên nghiệp, các sản phẩm BlueStone được thiết kế theo tiêu chuẩn quốc tế nghiêm ngặt nhằm đáp ứng được nhu cầu ngày càng cao của người tiêu dùng.
- BlueStone luôn coi trọng việc chăm sóc khách hàng. Các sản phẩm BlueStone đều được bảo hành 2 năm.

MỤC LỤC

MÔ TẢ CHUNG	04
TRƯỚC KHI GỌI NHÂN VIÊN KỸ THUẬT	05
NHỮNG HƯỚNG DẪN VỀ TIẾP ĐẤT	05
HƯỚNG DẪN SỬ DỤNG AN TOÀN	05
TRƯỚC KHI SỬ DỤNG NỘI	07
HƯỚNG DẪN SỬ DỤNG NỘI	08
HƯỚNG DẪN CÀI ĐẶT	10
XỬ LÝ SỰ CỐ	12
VỆ SINH VÀ BẢO QUẢN	14
CẤT GIỮ NỘI	14
CẢNH BÁO	14
BẢO VỆ MÔI TRƯỜNG	14

CONTENTS


DETAILS DESCRIPTION	17
BEFORE YOU CALL FOR THE SERVICE	18
GROUNDING INSTRUCTIONS	18
IMPORTANT SAFEGUARDS	18
BEFORE USING YOUR AIR FRYER	20
USAGES	21
SETTING	23
TROUBLE SHOOTING	25
MAINTENANCE AND CLEANING	27
STORING THE DEVICE	27
WARNING	27
ENVIRONMENT FRIENDLY DISPOSAL	27

- Tiêu chuẩn kỹ thuật nhà sản xuất có thể thay đổi mà không cần báo trước.
- Manufacturer has right to replace technical standard or specification without any notice.

MÔ TẢ CHUNG

Model	Hiệu điện thế	Công suất (W)	Dung tích (L)
AFB-5870	220-240V ~ 50Hz	2000W	5L

CẤU TẠO SẢN PHẨM

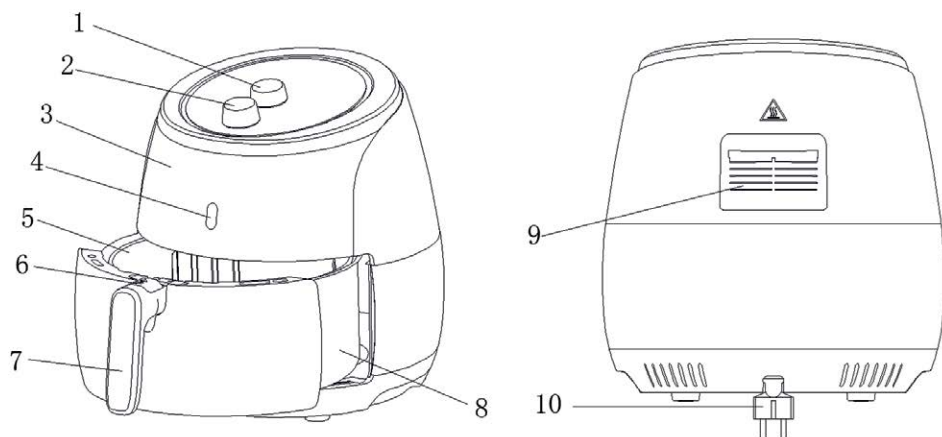

1 Núm điều chỉnh nhiệt độ

2 Núm điều chỉnh thời gian

3 Nắp thân

4 Đèn tín hiệu

5 Rổ chiên

6 Núm tháo

7 Tay cầm

8 Khay hứng dầu

9 Cửa thoát gió

10 Dây nguồn

TRƯỚC KHI GỌI NHÂN VIÊN KỸ THUẬT

Trong trường hợp nồi chiên không hoạt động:

- 1 Kiểm tra chắc rằng nồi đã có điện. Nếu không, rút phích cắm, chờ 10 phút, và cắm lại thật sát.
- 2 Kiểm tra cầu chì hoặc bộ phận ngắt điện. Nếu những hệ thống này đang hoạt động tốt, kiểm tra lại nguồn điện bằng cách kết nối các thiết bị điện khác và kiểm tra xem các thiết bị như trên có hoạt động hay không.

NẾU ĐÃ KIỂM TRA BẰNG CÁC CÁCH NHƯ TRÊN NHƯNG NỒI CHIÊN VẪN KHÔNG HOẠT ĐỘNG, HÃY LIÊN HỆ VỚI NHÂN VIÊN KỸ THUẬT CÓ TAY NGHỀ, TUYỆT ĐỐI KHÔNG ĐƯỢC TỰ Ý ĐIỀU CHỈNH HAY SỬA CHỮA NỒI CHIÊN NHẪM TRÁNH CÁC TAI NẠN NGOÀI Ý MUỐN.

NHỮNG HƯỚNG DẪN VỀ TIẾP ĐẤT

Để đảm bảo an toàn, các thiết bị điện nên luôn được tiếp đất. Chúng tôi khuyên người sử dụng cắm điện thiết bị vào ổ điện với hệ thống tiếp đất được lắp đặt an toàn tại nhà. Trong trường hợp có sự cố, sự tiếp đất sẽ hạn chế rủi ro chập điện, cháy nổ bằng việc dẫn điện thoát khỏi nguồn điện hiện hành. Điều đó cho thấy sự tách biệt kịp thời khỏi nguồn điện sẽ an toàn hơn cho người sử dụng. Sử dụng điện áp cao rất nguy hiểm, có thể gây cháy hoặc một vài sự cố khác gây hư hỏng cho thiết bị.

LƯU Ý:

- ▶ Nếu bạn chưa rõ về sự tiếp đất hoặc hướng dẫn về điện, hãy liên lạc với chuyên viên kỹ thuật điện hoặc kỹ sư điện.
- ▶ Cả người sản xuất và người bán đều không chịu trách nhiệm về sự hỏng hóc của nồi hoặc bị thương đối với người sử dụng bắt nguồn từ việc sử dụng không đúng quy trình lắp đặt nguồn điện.

HƯỚNG DẪN SỬ DỤNG AN TOÀN

- ▶ Vui lòng hết sức lưu ý với những cảnh báo nguy hiểm cơ bản dưới đây nhằm giảm nguy cơ hỏa hoạn, điện giật, cháy và nguy hiểm cho người sử dụng.

- 1 Đọc tất cả các hướng dẫn trước khi sử dụng nồi.
- 2 Không chạm vào các bề mặt nóng, chỉ sử dụng tay cầm để di chuyển.

- 3 **CẢNH BÁO:** Chỉ cho phép trẻ em sử dụng nồi dưới sự giám sát của người lớn hoặc đã hướng dẫn đầy đủ giúp trẻ hiểu được cách sử dụng sao cho an toàn và những rủi ro có thể xảy ra nếu sử dụng không đúng cách.
- 4 Để đảm bảo an toàn, không được nhúng dây điện, phích cắm hoặc bất kỳ bộ phận nào của nồi vào trong nước hoặc các chất lỏng khác, không để dây nguồn trên các bề mặt nóng.
- 5 Không để dây dẫn chạm vào hoặc nằm dưới khi nồi đang còn nóng.
- 6 Không sử dụng nồi khi quan sát được các bộ phận hoặc dây nguồn bị hư hỏng. Nếu có phát hiện ra, vui lòng đem thiết bị đến trung tâm bảo hành gần nhất để được hỗ trợ. Tuyệt đối không tự ý sửa chữa nồi chiên, gây nguy hiểm cho bản thân.
- 7 Không nên sử dụng các phụ kiện không đi kèm cùng với nồi chiên, có khả năng gây nguy hại cho thiết bị và thương tích cho người sử dụng.
- 8 Không được đặt nồi chiên ở vị trí gần bình gas, khí nóng, hoặc gần các chất dễ gây cháy, nổ. Cần tuyệt đối cô lập thiết bị với các vật liệu khí đốt, dễ bắt lửa như trên.
- 9 Cần giữ khoảng cách không gian trống xung quanh thân nồi ít nhất 10cm trước khi vận hành để cho phép không khí lưu thông thoáng mát.
- 10 Rút phích cắm điện khỏi ổ cắm khi không sử dụng, hoặc trước khi làm vệ sinh nồi. Hãy để nồi nguội (30 phút) trước khi lắp vào hoặc tháo dỡ các bộ phận để vệ sinh nồi.
- 11 Thận trọng khi di chuyển thiết bị nếu có sử dụng dầu nóng khi nấu thực phẩm.
- 12 Để bảo đảm nồi không bị quá nhiệt khi sử dụng, không che phủ các mặt của nồi chiên có cửa hút gió và thoát gió.
- 13 Cần thận khi lấy rổ chiên ra khỏi nồi, không đưa tay hoặc mặt vào gần chỗ thoát hơi nóng khi đang nấu.
- 14 Không phủ hay bao bọc nồi chiên với bất kỳ vật liệu dễ cháy, bao gồm cả màn cửa, khăn bàn, quần áo và các chất liệu tương tự khi nồi đang hoạt động. Không được để bất kỳ vật gì trên nồi trong khi nồi đang hoạt động.
- 15 Để ngắt nguồn điện kết nối, vận các nút điều khiển về điểm tắt "0", sau đó rút phích cắm.
- 16 Nên mang găng tay cách nhiệt, cách điện khi thao tác với thức ăn đang được nấu bên trong lòng nồi chiên.

- 17 Không sử dụng nồi chiên trong môi trường ngoài trời.
- 18 Không sử dụng các phụ kiện đi kèm của nồi cho mục đích sử dụng khác ngoài hướng dẫn của nhà sản xuất.
- 19 Khi nồi đang hoạt động, nhiệt độ thân nồi sẽ trở nên nóng. Thận trọng khi thao tác và di chuyển nhằm tránh bị bỏng.
- 20 Không sử dụng nồi chiên cùng những thiết bị không đi kèm với nồi, hoặc với một hệ thống điều khiển từ xa riêng biệt.
- 21 Trẻ em và người khiếm khuyết khả năng giác quan, có tiền sử bệnh tâm thần, hay người thiếu kinh nghiệm và kiến thức chuyên môn không được sử dụng nồi, trừ khi có người giám sát và chịu trách nhiệm về sự an toàn của họ.
- 22 Trẻ em phải được giám sát để chúng không chơi đùa với nồi.
- 23 Nếu dây nguồn bị hỏng, tuyệt đối không tự ý sửa chữa hay can thiệp. Vui lòng liên hệ đến trung tâm bảo hành gần nhất để được hỗ trợ, tránh xảy ra sự cố đáng tiếc.
- 24 Rút phích cắm ngay nếu nhìn thấy khói đen bốc ra từ nồi. Chờ cho khói thoát hết ra trước khi đến gần để lấy rổ ra khỏi nồi.

TRƯỚC KHI SỬ DỤNG NỒI

Vui lòng lưu ý các điều như sau trước khi sử dụng nồi chiên:

- 1 Bảo đảm rằng các hướng dẫn sử dụng đã được đọc và hiểu rõ trước khi sử dụng.
- 2 Kiểm tra các nút điều chỉnh "Thời gian" và "Nhiệt độ", bảo đảm rằng cả hai đang ở vị trí "0" trước khi bắt đầu sử dụng.
- 3 Tháo gỡ các bao bì đóng gói, nhãn dán trên thân máy và bên trong nồi chiên.
- 4 Rửa rổ chiên bằng nước nóng có xà bông hoặc trong máy rửa chén.
- 5 Làm khô ráo tất cả các phụ kiện của nồi trước khi lắp ráp hoàn chỉnh để sử dụng.
- 6 Lau bên trong và ngoài thân nồi bằng vải mềm. Khi sử dụng nồi để chiên/nướng, có thể cân nhắc để sử dụng hoặc không sử dụng dầu để nấu. Sau khi đặt thực phẩm vào bên trong rổ chiên và ráp vào, nồi sẽ bắt đầu hoạt động khi bạn cắm dây nguồn vào.

CHÚ Ý:

Luôn đặt nồi ở bề mặt bằng phẳng, chịu được nhiệt độ cao và môi trường xung quanh thoáng mát. Khi nồi đang hoạt động, không được đặt bất cứ thứ gì phía trên nồi chiên, ngăn chặn dòng lưu thông của khí ra vào thiết bị.

HƯỚNG DẪN SỬ DỤNG NỒI

- 1 Nắm tay cầm, cẩn thận kéo khay hứng dầu và rổ chiên của nồi ra ngoài.



- 2 Đặt các thực phẩm cần chế biến vào trong rổ chiên.
Lưu ý: Không cho lượng thực phẩm vượt chỉ số "MAX" (xem thêm phần "Hướng dẫn cài đặt"), dẫn đến lượng thực phẩm quá nhiều, ảnh hưởng đến chất lượng nấu của thực phẩm.

- 3 Sau đó, nhẹ nhàng đẩy rổ chiên vào bên trong thân nồi cho đến khi rổ chiên đã được lắp vào chắc chắn.



CHÚ Ý:

Không sử dụng nồi chiên mà không có rổ chiên bên trong.
Rổ chiên sẽ rất nóng trong suốt thời gian đang và sau khi nấu. Không nên chạm vào rổ trong quá trình này và chỉ sử dụng tay cầm để di chuyển.

- 4 Cắm dây nguồn vào ổ cắm điện tiếp đất.
- 5 Vận nút điều chỉnh nhiệt độ đến nhiệt độ thích hợp. (xem ở phần "Hướng dẫn cài đặt" để xác định nhiệt độ phù hợp).



- 6 Vận nút điều chỉnh thời gian để khởi động và làm nóng rổ chiên.



CHÚ Ý:

Thời gian để làm nóng thiết bị là 3 phút. Bạn có thể làm nóng thiết bị trước khi sử dụng mà không cần phải có thực phẩm bên trong. Sau khi đã làm nóng thiết bị, bạn đã có thể cho thực phẩm cần chế biến vào nồi chiên và điều chỉnh nhiệt độ, thời gian phù hợp.

- 7 Một số loại thực phẩm cần được trở mặt trong quá trình nấu (xem ở phần "Hướng dẫn cài đặt"). Để trở mặt, bạn hãy cầm tay nắm, kéo rổ chiên kèm khay hứng dầu ra khỏi nồi. Sau khi trở mặt, bạn chỉ cần trượt khay vào bên trong nồi.



Mẹo: Đối với những loại thực phẩm cần được trở mặt, bạn có thể điều chỉnh thời gian ngắn hơn so với thời gian yêu cầu để nấu chín. Đến khi nghe tiếng chuông báo hiệu hết thời gian, kéo rổ chiên ra để trở mặt thực phẩm, sau đó cài đặt lại thời gian một lần nữa để tiếp tục nấu đúng với thời gian yêu cầu để nấu chín.

Lưu ý: Không nhấn nút tháo lồng nồi ở tay cầm khi đảo trộn thực phẩm bên trong.



- 8 Khi nghe tiếng chuông báo hết thời gian cài đặt, kéo rổ chiên kèm khay hứng dầu ra khỏi thiết bị và đặt lên vật dụng có khả năng chịu nhiệt.

CHÚ Ý: Bạn cũng có thể tắt thiết bị bằng cách vận nút điều chỉnh nhiệt độ về "0".

- 9 Kiểm tra lại thực phẩm sau khi chiên. Nếu thực phẩm chưa chín đạt như ý bạn muốn, đẩy rổ chiên kèm khay hứng dầu vào lại thiết bị và chỉnh thời gian thêm vài phút.

- 10 Trút thực phẩm sau khi chiên ra đĩa thức ăn bằng cách để lồng nồi và rổ chiên ngay ngắn trên một mặt phẳng, ấn nút tháo lồng nồi và nhắc rổ chiên ra khỏi khay hứng dầu.



- 11 Sau khi sử dụng xong, nồi chiên sẽ lại sẵn sàng để tiếp tục sử dụng để làm ra các món chiên thơm ngon, tốt cho sức khỏe.

HƯỚNG DẪN CÀI ĐẶT

Một số hướng dẫn dưới đây sẽ giúp bạn lựa chọn chế độ cài đặt cơ bản cho một vài loại thực phẩm.

► LƯU Ý:

Những hướng dẫn dưới đây chỉ mang tính chất tham khảo, vì thực phẩm khác nhau về nguồn gốc, kích cỡ, hình dáng. Chúng tôi không đảm bảo rằng những chỉ số hướng dẫn cài đặt như bên dưới là tối ưu nhất cho thực phẩm.

Công nghệ Rapid Air – Lưu chuyển luồng khí sau khi đã được làm nóng bằng thanh nhiệt trong nồi liên tục. Khi rổ chiên và khay hứng dầu được kéo ra khỏi nồi, quá trình chiên sẽ bị gián đoạn cho đến khi rổ chiên được đẩy vào trở lại, an toàn cho người sử dụng.

► Mẹo nhỏ khi sử dụng nồi chiên:

- Thực phẩm nhỏ sẽ cần thời gian cài đặt ngắn hơn những thực phẩm có kích thước lớn.
- Việc trở mặt thực phẩm trong quá trình chiên sẽ giúp thực phẩm chín đều hơn.
- Quét một ít dầu lên bề mặt khoai tây sẽ giúp cho khoai tây được giòn hơn sau khi chiên.
- Các loại bánh chiên phồng cũng có thể được sử dụng với nồi chiên không dầu.
- Khối lượng thực phẩm đề xuất để có kết quả tối ưu nhất khi sử dụng nồi chiên là 500 grams.
- Nồi chiên cũng có thể được sử dụng để làm các loại bánh ngào bột dễ dàng. Bạn cũng có thể đặt khuôn vào trong rổ chiên để nướng đối với những loại bánh như cupcake.
- Sử dụng khuôn đối với các món ăn được nhồi hay dễ bị tước, vỡ ra khi nấu.
- Có thể sử dụng nồi chiên để hâm nóng thức ăn. Để hâm nóng thức ăn, cài đặt nhiệt độ 150°C trong khoảng 10 phút.

MÓN ĂN	KHỐI LƯỢNG (G)	THỜI GIAN (PHÚT)	NHIỆT ĐỘ (°C)	TRỞ MẶT	GHI CHÚ
Khoai tây chiên					
Khoai tây chiên cắt mỏng	400-500	18-20	200	X	
Khoai tây chiên cắt dày	400-500	20-25	200	X	
Khoai tây cắt khối, hạt lựu	600	20-25	200	X	
Thịt & Gia cầm					
Thịt bò	100-600	10-15	180		
Sườn heo	100-600	10-15	180		
Hamburger	100-600	10-15	180		
Xúc xích cuộn	100-600	13-15	200		
Đùi gia cầm	100-600	25-30	180		
Ức gà	100-600	15-20	180		
Thực phẩm chiên					
Chả giò	100-500	8-10	200	X	Rã đông trước khi chiên
Gà cốm đông lạnh	100-500	6-10	200	X	Rã đông trước khi chiên
Thanh cá đông lạnh	100-500	6-10	200		Rã đông trước khi chiên
Bánh mì đông lạnh vụn phô mai	100-500	8-10	180		Rã đông trước khi chiên
Rau nhồi	100-500	10-15	160		
Các món nướng					
Bánh gato	400	20-25	160		Sử dụng khay nướng/ đĩa nướng
Quiche	500	20-22	180		Sử dụng khay nướng/ đĩa nướng
Muffins	400	15-18	200		Sử dụng khay nướng
Bánh ngọt	500	20	160		Sử dụng khay nướng/ đĩa nướng

XỬ LÝ SỰ CỐ

Vấn đề	Nguyên nhân	Giải pháp
Nồi chiên không dầu không hoạt động.	Thiết bị không được cắm vào ổ cắm điện.	Cắm phích cắm điện vào ổ cắm trên tường nối đất.
	Bạn chưa đặt hẹn giờ.	Xoay núm hẹn giờ đến thời gian chuẩn bị cần thiết để bật thiết bị.
Các món ăn chiên với nồi chiên không dầu không thực hiện được.	Lượng nguyên liệu trong rổ chiên quá lớn.	Chia nhỏ lượng thực phẩm và chiên nhiều lần để đảm bảo thực phẩm chín đều, thơm ngon hơn.
	Nhiệt độ cài đặt quá thấp.	Xoay núm điều chỉnh nhiệt độ nấu phù hợp theo nhiệt độ nấu cần thiết có trên bảng điều khiển hoặc xem phần "Hướng dẫn cài đặt".
	Thời gian nấu quá ngắn.	Xoay núm điều chỉnh thời gian nấu phù hợp theo thời gian nấu cần thiết có trên bảng điều khiển hoặc xem phần "Hướng dẫn cài đặt".
Các thành phần được chiên không đồng đều trong nồi chiên không dầu.	Một số thực phẩm cần được trở mặt trong thời gian nấu.	Thực phẩm cần được trở đều trong thời gian nấu. Xem phần "Hướng dẫn cài đặt".
Đồ ăn nhẹ chiên không giòn khi được lấy khỏi nồi chiên không dầu.	Các loại đồ ăn nhẹ chiên theo cách truyền thống.	Quét nhẹ một ít dầu lên bề mặt để thực phẩm sau khi chiên sẽ giòn và ngon hơn.

Không thể đóng lòng nổi đúng cách.	Có quá nhiều nguyên liệu món ăn trong rổ chiên.	Không để thực phẩm vào rổ chiên vượt quá chỉ số MAX.
	Rổ chiên không được đặt trong khay hứng dầu chính xác.	Ấn rổ chiên xuống cho đến khi bạn nghe thấy tiếng "tách".
Khói trắng bay ra khỏi thiết bị.	Bạn đang nấu các nguyên liệu có chứa dầu mỡ.	Khi bạn chiên các thức ăn dầu mỡ trong nồi chiên, một lượng lớn dầu sẽ tiết ra vào khay hứng dầu. Dầu tạo ra khói trắng và khay có thể nóng hơn bình thường. Điều này không ảnh hưởng đến thiết bị hoặc kết quả cuối cùng.
	Khay hứng dầu vẫn chứa lượng dầu mỡ còn lại từ lần sử dụng trước.	Khói trắng là do dầu mỡ nóng lên trong khay hứng dầu. Hãy đảm bảo bạn làm sạch khay đúng cách sau mỗi lần sử dụng.
Khoai tây không được chiên đều trong nồi chiên không dầu.	Bạn đã không sử dụng đúng loại khoai tây.	Sử dụng khoai tây tươi và đảm bảo chúng nguyên vẹn trong quá trình chiên.
	Sơ chế khoai tây chưa đúng cách (gọt vỏ không sạch, thái/ cắt quá to, không để ráo).	Làm sạch vỏ, thái/ cắt nhỏ vừa ăn. Ngâm, rửa sạch để loại bỏ tinh bột. Để khoai tây ráo nước mới bắt đầu chiên.
Khoai tây tươi chiên không giòn khi lấy ra khỏi nồi chiên.	Độ giòn của khoai tây chiên phụ thuộc vào lượng dầu và nước trong khoai tây chiên.	Làm sạch và để ráo khoai tây.
		Thái khoai tây nhỏ hơn để chiên giòn hơn. Quét một chút dầu lên bề mặt để khoai tây chiên giòn hơn.

VỆ SINH VÀ BẢO QUẢN

- 1 Tuyệt đối không tự ý sửa chữa hay thay đổi các bộ phận bên trong của nồi chiên. Nếu gặp phải sự cố, hãy liên hệ đến trung tâm bảo hành gần nhất để được hỗ trợ và sửa chữa.
- 2 Xoay tất cả các nút vặn của nồi về vị trí "0" để tắt nồi, rút phích cắm và để nguội hoàn toàn trước khi thực hiện vệ sinh.
- 3 Để đảm bảo an toàn, không được nhúng các bộ phận, dây hoặc phích cắm vào nước hoặc các chất lỏng khác.
- 4 Sử dụng một miếng vải mềm vắt khô, có thể thấm chất tẩy rửa nhẹ để vệ sinh mặt ngoài của nồi.
- 5 Rổ chiên có thể được rửa trong nước có xà bông hoặc trong máy rửa chén.
- 6 Vệ sinh không đúng cách sẽ ảnh hưởng đến tuổi thọ của nồi.
- 7 Lau khô tất cả các bộ phận và bề mặt của nồi thật kỹ trước khi cắm điện và sử dụng.

CẮT GIỮ NỒI

- Hãy để nồi chiên nguội xuống hoàn toàn, vệ sinh sạch sẽ trước khi cất giữ nồi.
- Khi cất giữ, không để bất kì vật nặng nào đè lên nồi và dây cắm điện, dẫn đến trầy xước và hỏng hóc.
- Bảo đảm rằng các phụ kiện, rổ chiên của nồi đã thật khô ráo trước khi cất giữ.

CẢNH BÁO

- Nếu phát hiện ra bất kì hỏng hóc nào với dây nguồn và thiết bị, vui lòng liên hệ đến trung tâm bảo hành để được hỗ trợ.
- Điện áp cao trong thiết bị sẽ gây nguy hiểm cho người sử dụng nếu tự ý thực hiện sửa chữa.
- Rút phích cắm ra khỏi ổ điện sau khi sử dụng xong. Nắm ở đầu dây cắm và nhẹ nhàng ra khỏi ổ điện. Tuyệt đối không nên nắm ở thân dây và rút ra, gây tổn hại cho dây.
- Sau khi rút phích cắm, phần tử gia nhiệt sẽ vẫn còn nóng. Cho nên không được chạm vào hoặc đặt lên trên các bề mặt dễ cháy.

BẢO VỆ MÔI TRƯỜNG

Hãy bảo vệ môi trường của bạn!

Tôn trọng quy định của địa phương: hãy đem những thiết bị điện không sử dụng nữa đến những nơi thu gom phù hợp để tái chế. Dùng bàn chải nhỏ để làm sạch van xả áp suất và lỗ thoát hơi nước.

BlueStone

Model
AFB-5870

User manual

Air Fryer



Rapid Air Technology for making delicious fried food with up to 80% less fat

Light indicator system and programmable timer help to cook more precise

5L capacity, removable frying basket for family size and easy clean-up

Always keep manual for your safety

CB RoHS

• Standard Compliance

BlueStone products are manufactured under the Standards and the technical rules for product safety design and testing.

BlueStone products and associated accessories intended for professional, industrial process under RoHS (Restriction of Hazardous Substances), CB Standards and have been successfully tested on areas: sampling test, assembling test and lot test.

• Trademark

BlueStone manufactured products are based on the consultation by Great American Appliance (GAA Corp) a company incorporated and existing under the laws of United States of America under Certificate of Incorporation No. 3089043 in the secretary office located in the state of California in Michigan, Ave Oakland, CA 94605, USA.

• Industrial design


BlueStone provides products with industrial design and color variations offering a broad range of possibilities for customers. Through the experienced designers and technicians, BlueStone design has highly reliable solutions so the customers are assured of quality designed systems that meet stringent industry and international compliance regulations.

• After sales service

After sales service is considered by BlueStone as a major concern for our customers. With such, we provide our BlueStone products with a 2 years guaranteed warranty that help our end user feel at ease.

DETAILS DESCRIPTION

Model	Voltage	Power (W)	Capacity (L)
AFB-5870	220-240V ~ 50Hz	2000W	5L

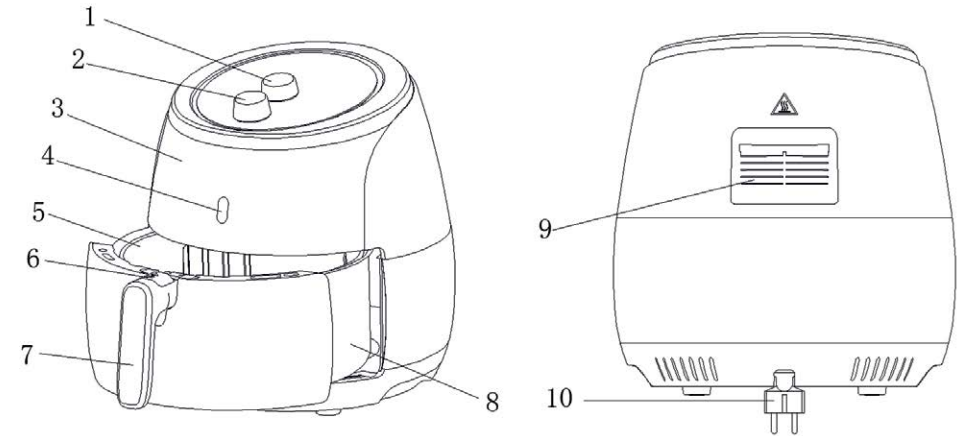

1	Temperature control knob
2	Timer knob
3	Main housing
4	Power-on light
5	Basket

6	Basket release button
7	Basket handle
8	Pan
9	Air outlet
10	Main cord (Electrical cord)

BEFORE YOU CALL FOR THE SERVICE

If the Air Fryer fails to operate

- 1 Check to ensure that the Air Fryer is plugged in securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it in again firmly.
- 2 Check for a blown circuit fuse or a tripped main circuit breaker. If these two issues are not found, test the outlet with another appliance.

IF NONE OF THE ABOVE RECTIFIES THE SITUATION, THEN CONTACT A QUALIFIED TECHNICIAN. DO NOT TRY TO ADJUST OR REPAIR THE AIR FRYER BY YOURSELF.

GROUNDING INSTRUCTIONS

This appliance must be grounded. This air fryer is equipped with a cord having ground wire with a grounding plug. It must be plugged into a wall receptacle that is properly installed and grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock via escape wire for the electric current to flow into the ground. This shows that separation from the power source during malfunction has been treated to maximize user's safety. Please be fully aware of the potential danger with using high voltage's appliance that may result in a fire or other accident causing damage to the appliance.

Note:

- ▶ If you have any question about the grounding of electrical instruction, consult a qualified electrician or service person.
- ▶ Neither the manufacturer nor the dealer can accept any liability for damage to the appliance or personal injury resulting from failure to observe the electrical connection procedures.

IMPORTANT SAFETY INSTRUCTION

- ▶ When using this appliance, basic safety precaution should always be followed, including the following:
 - 1 Read all instructions and make sure that you fully understand them.
 - 2 Do not touch the air fryer's surface while its operational and immediately after using as it is still very hot. Take precaution and use the handle, knobs and insulation material to move the appliances.

- 3 To protect against electrical shock, do not immerse cord, plug or any parts of the appliance in water or other liquids.
- 4 Do not let cord hang over edge of table or counter, or touching sharp and other hot surfaces.
- 5 Do not operate appliance with damaged cord, plug or that the parts are damaged in any manner. Please return appliance to the nearest Authorized Service Center for examination, repair or adjustment.
- 6 The use of accessory attachments other than those designed to use with the appliance are not recommended as it may cause hazard or injury.
- 7 Do not place the appliance on or near a hot gas or electric burner, inside a furnace, or any other operating devices.
- 8 When operating, keep at least 10cm of space on all sides of the appliance to allow for adequate air circulation.
- 9 Unplug from the outlet when not in use, or before cleaning. Let it cool before putting on or removing of parts or before cleaning.
- 10 Extreme caution must be used when moving the appliance containing hot oil or other hot liquid.
- 11 Do not cover any part of the appliance while its operational. This may cause overheating.
- 12 Be careful when taking the basket out, do not touch or put your face near the air outlet.
- 13 Fire hazard may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls and the like, during operation. Do not place any item on the appliance while its in use.
- 14 Always attach plug to appliance first, then plug the cord into the wall outlet. To disconnect, turn the temperature and timer knob to "0", then remove the plug from wall outlet.
- 15 Always wear protective, insulated mitts when inserting or removing foods from the appliances.
- 16 This appliance is designed for indoor uses only. Do not operate the appliance in an outdoor environment.
- 17 Do not use appliance for other purpose.

- 18 The accessible surfaces are liable to get hot when the appliance is operating.
- 19 This appliance is not intended to be controlled by an external timer or separated remote-control system.
- 20 This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of appliance by a person responsible for their safety.
- 21 Children should be supervised to ensure that they do not play with the appliance.
- 22 If the cord is damaged, it must be replaced by the manufacturer, its service agent or similiary qualified person in order to avoid hazard.
- 23 Immediately unplug the appliance if smoke are seen coming out of the appliance. Wait for the smoke emission to stop before you remove the frying basket from the appliance.

BEFORE USING YOUR AIR FRYER

Before using the Air Fryer for the 1st time, be sure to:

- 1 Read all instructions included in this manual.
- 2 Make sure the appliance is unplug and timer knob in the "0" position.
- 3 Remove all plastic bag, packaging and label.
- 4 Remove the frying basket and wash it with hot water or in a dishwasher.
- 5 Thoroughly dry all accessories and re-assemble in the appliance.
- 6 Wipe the inside and outside of the appliance with a wet cloth. There is no need to use cooking oil/frying fat with the food being cooked as the appliance function based on hot air circulation.

Note:

Ensure the appliance in placed on a horizontal, stable and heat-resistant surface. Do not put anything on top of the appliance while it's operational as the airflow will be disrupted.

USAGES

- 1 Remove the frying basket and holder from the air fryer carefully.



- 2 Put the ingredients into the basket.
Note: Do not put the ingredients over the "MAX" line (refer at section "SETTING") as it may affect the quality of the food.

- 3 Slide the frying basket back into the air fryer.



Note:

Never use the frying basket without the holder. Always make sure that these two components are combined firmly before using the appliance. Do not touch the frying basket during use and immediately after stopping the air fryer as it's still very hot. Only hold the frying basket by its handle. We recommend to use insulated mitt for your safety.

- 4 Switch on the air fryer by plugging the cord into the wall outlet.
- 5 Turn the temperature control knob according to your cooking reference (refer at section "Setting" to determine the right temperature).



- 6 Turn the timer knob to determine the required preparation time for the ingredient.



- 7 The green power light and the red cooking light will go on, the air fryer has now begin its cooking process. The timer will begin counting down based on the set preparation time. During the cooking cycle, the red heating light will turn off from time to time. This indicates that the heating elements is maintaining the set temperature.

Note:

The heating time is 3 minutes if the appliance is idle. You can reheat the appliance before operating without ingredients inside. Turn the timer knob for more than 3 minute and wait until the red heating light turn off (about 3 mins). Then fill the basket and turn the timer knob to the required preparation time.

- 8 Some ingredients must be shaken halfway during the preparation time. At the halfway point, pull the frying basket out of the appliance by the handle, and then gently shake to readjust the food for an even cooking result. Then, slide the frying basket back into the appliance.



Note: Do not press the basket release button on the handle while shaking.

Tips: You can set the timer by half of the intended preparation time to be alerted of when to do step #8.

Please note that this would mean that you have to manually set the timer again to the remaining half of the preparation time after shaking to continue cooking.

- 9 When you hear the timer alert sound, the set preparation time has completely elapsed. Pull the frying basket out of the appliance and place it on a heat-resistant holder/insulation mat.

Note: You can also switch off the appliance manually by turning the temperature control knob to "0".

- 10 Check if the food are well-cooked. If it's not ready yet, simply slide the frying basket back into the appliance and set the timer to a few extra minutes and continue cooking.

- 11 Press the basket release button when both of the frying basket and holder are on a flat surface and lift the basket out of the holder.



- 12 Once finished cooking, the air fryer is instantly ready for you to prepare cooking another batch.

SETTING

The table below will help you to select the basic settings for the common types of ingredients.

► **Note:**

Please note that these settings provide the basic indications of how each types of ingredients should be cooked. As ingredients differ in texture, size and shape, we cannot guarantee it's the best setting for your ingredients

The Rapid Air technology reheats the air inside the appliance instantly, pulling the frying basket briefly out of the appliance while the appliance is operation would barely disturbs the process.

► **Tips:**

- Smaller ingredients usually require a slightly shorter preparation time than larger ingredients.
- Shaking smaller ingredients halfway during the preparation time optimizes the end result and can help to prevent unevenly fried ingredients.
- Add some oil to the fresh potatoes before cooking for a crispy result. Fry for a few minutes after adding the oil to receive the best result.
- Do not prepare extremely greasy ingredients such as sausages in the air fryer.
- Snacks that are usually prepared to be cooked in an oven can also be prepared in the air fryer.
- The optimal amount for crispy texture fries is about 500 grams.
- Use pre-made dough to prepare filled snacks quickly and easily. Pre-made dough also requires a shorter preparation time than home-made dough.

- Place a baking tin or oven dish in air fryer basket if you want to bake cake, quiche or if you want to fry fragile ingredients or filled ingredients.
- You can also use the air fryer to reheat. To do so, set the temperature to 150°C for up to 10 minutes.

Ingredient	Min-Max amount (g)	Time (min)	Temperature (°C)	Shake	Extra Information
Potatoes & Fries					
Thin frozen fries	400-500	18-20	200	X	
Thick frozen fries	400-500	20-25	200	X	
Potato gratin	600	20-25	200	X	
Meat & poultry					
Steak	100-600	10-15	180		
Pork chop	100-600	10-15	180		
Hamburgers	100-600	10-15	180		
Sausage roll	100-600	13-15	200		
Drumsticks	100-600	25-30	180		
Chicken breast	100-600	15-20	180		
Snacks					
Spring rolls	100-500	8-10	200	X	Use oven-ready
Frozen chicken nuggets	100-500	6-10	200	X	Use oven-ready
Frozen fish fingers	100-500	6-10	200		Use oven-ready
Frozen bread crumbed cheese snacks	100-500	8-10	180		Use oven-ready
Stuffed vegetables	100-500	10-15	160		
Baking					
Cake	400	20-25	160		Use baking tin

Quiche	500	20-22	180		Use baking tin/ oven dish
Muffins	400	15-18	200		Use baking tin
Sweet snacks	500	20	160		Use baking tin/ oven dish

TROUBLE SHOOTING

Problem	Possible cause	Solution
The Hot-air fryer does not work.	The appliance is not plugged in.	Put the mains plug in an earthed wall socket.
	You have not set the timer.	Turn the timer knob to the required preparation time to switch on the appliance.
The ingredients fried with the air fryer are not done.	The amount of ingredients in the basket is too big.	Put smaller batches of ingredients in the basket. Smaller batches are fried more evenly.
	The set temperature is too low.	Turn the temperature control knob to the required temperature setting (see section "settings" in chapter "Using the appliance").
	The preparation time is too short.	Turn the timer knob to the required preparation time (see section "Settings" in chapter "Using the appliance").
The ingredients are fried unevenly in the air fryer.	Certain types of ingredients need to be shaken halfway through the preparation time.	Ingredients that lie on top of or across each other (e.g. fries) need to be shaken halfway through the preparation time. See section "Settings" in chapter "Using the appliance".

Fried snacks are not crispy when they come out of the air fryer.	You used a type of snacks meant to be prepared in a traditional deep fryer.	Use oven snacks or lightly brush some oil onto the snacks for a crispier result.
I cannot slide the pan into the appliance properly.	There are too much ingredients in the basket.	Do not fill the basket beyond the MAX indication.
	The basket is not placed in the pan correctly.	Push the basket down into the pan until you hear a click.
White smoke comes out of the appliance.	You are preparing greasy ingredients.	When you fry greasy ingredients in the air fryer, a large amount of oil will leak into the pan. The oil produces white smoke and the pan may heat up more than usual. This does not affect the appliance or the end result.
	The pan still contains grease residues from previous use.	White smoke is caused by grease heating up in the pan. make sure you clean the pan properly after each use.
Fresh fries are fried unevenly in the air fryer.	You did not use the right potato type.	Use fresh potatoes and make sure they stay firm during frying.
	You did not rinse the potato sticks properly before you fried them.	Rinse the potato sticks properly to remove starch from the outside of the sticks.
Fresh fries are not crispy when they come out of the air fryer.	The crispiness of the fries depends on the amount of oil and water in the fries.	Make sure you dry the potato sticks properly before you add the oil.
		Cut the potato sticks smaller for a crispier result.
		Add slightly more oil for a crispier result.

MAINTENANCE AND CLEANING

- 1 This appliance requires little maintenance. It contains no user serviceable parts. Hence, do not try to repair it yourself. Contact a qualified appliance repair technician if the product requires servicing.
- 2 Always unplug and allow to completely cool down before cleaning with rinsed dry wet cloth.
- 3 To protect against risk of electrical shock, do not immerse the unit, cord or plug in water or any other liquid.
- 4 Wipe the outside of the appliance with a moist cloth.
- 5 Clean the pan and basket with hot water, some washing-up liquid and a non-abrasive sponge.
- 6 Cleaning without proper instruction can damage the appliance and affect to the product life.
- 7 Dry all parts and surfaces thoroughly prior to plugging in and using.

STORING THE DEVICE

- Unplug it, allow to cool and clean before storing.
- Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.
- Make sure all accessories are dried before storing.

WARNING

- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid hazard.
- Do not try to adjust or repair this appliance to avoid risk of electric shock due to high voltage.
- Unplug carefully after using by holding onto the plug component and gently pull away from the outlet. Never pull on the cord to avoid damage to the device, causing potential hazard to user.
- Heating elements and the surface of the appliance will remain hot even after unplugging. Avoid touching or placing combustible substance on the surface

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

