

Hướng dẫn sử dụng Máy ép trái cây



Bộ lọc bằng thép không gỉ 304, bền và an toàn cho sức khỏe.

Thiết kế cải tiến độc đáo của trục nghiền giúp chiết xuất lượng nước ép hiệu quả cao.

Thiết kế hiện đại với motor chất lượng cao giúp máy vận hành êm ái.



Hãy giữ lại Hướng Dẫn Sử Dụng vì sự an toàn của bạn.

CB

- Các sản phẩm và các linh kiện sản phẩm BlueStone đều được sản xuất dựa trên quy trình chuyên nghiệp theo tiêu chuẩn CB về chất lượng và an toàn sản phẩm.
- Bên cạnh đó, các sản phẩm BlueStone đều được kiểm tra chặt chẽ về mẫu mã, dây chuyền sản xuất và kiểm định lô hàng.
- Sản phẩm BlueStone được công ty đối tác Mỹ Great American Appliance (GAA Corp) tư vấn về quản lý và quy trình. GAA là công ty được thành lập và hoạt động theo luật pháp Mỹ theo Giấy chứng nhận thành lập số 3089043 do văn phòng thư ký bang California cấp có trụ sở chính tại 7809 Michigan Ave Oakland, CA 94605, Hoa Kỳ.
- Sản phẩm BlueStone được thiết kế theo kiểu dáng công nghiệp với màu sắc đa dạng. Dưới sự nghiên cứu và thiết kế của các chuyên viên thiết kế và kỹ thuật viên chuyên nghiệp, các sản phẩm BlueStone được thiết kế theo tiêu chuẩn quốc tế nghiêm ngặt nhằm đáp ứng được nhu cầu ngày càng cao của người tiêu dùng.
- BlueStone luôn coi trọng việc chăm sóc khách hàng. Các sản phẩm BlueStone đều được bảo hành 2 năm

MỤC LỤC

THÔNG SỐ KỸ THUẬT	04
MÔ TẢ CHUNG	05
CẢNH BÁO	05
CHÚ Ý	06
TRƯỚC KHI SỬ DỤNG	07
SỬ DỤNG MÁY	09
HƯỚNG DẪN THÁO MÁY	10
BẢO QUẢN VÀ LƯU TRỮ	11
SỰ CỐ VÀ GIẢI PHÁP	11
CHUNG TAY BẢO VỆ MÔI TRƯỜNG	12

CONTENTS

SPECIFICATION	15
GENERAL DESCRIPTION	16
WARNING	16
CAUTION	17
BEFORE OPERATION	18
USAGES	20
DISMANTLE	21
MAINTERNANCE AND STORAGE	22
TROUBLE SHOOTING	22
ENVIRONMENT FRIENDLY DISPOSAL	23

- Tiêu chuẩn kỹ thuật nhà sản xuất có thể thay đổi mà không cần báo trước.
- Manufacturer has right to replace technical standard or specification without any notice.

THÔNG SỐ KỸ THUẬT

Model: JEB-6519


Hiệu điện thế: 220V/50Hz.

Công suất: 250W

Tốc độ quay: 21000 vòng/phút



MÔ TẢ CHUNG

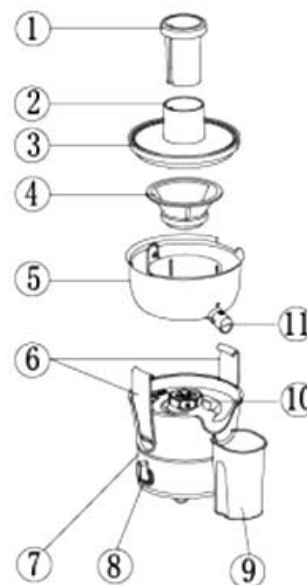

1	Thanh nhỏi
2	Ống dẫn thực phẩm
3	Nắp đậy
4	Lưới lọc
5	Hộc thu nước ép
6	Khóa an toàn
7	Thân máy
8	Nút điều khiển
9	Ca chứa nước ép
10	Trục quay
11	Bộ phận dẫn nước ép

CẢNH BÁO

- 1 Kiểm tra xem điện áp ghi trên máy có tương ứng với điện áp nguồn nơi sử dụng trước khi nối máy với nguồn điện.
- 2 Đảm bảo đã ngắt nguồn trước khi tháo gỡ, cài đặt, di chuyển hay tháo máy.
- 3 Trước khi vận hành thiết bị, hãy kiểm tra các dây cắm, lưỡi dao, lưới lọc và các thành phần khác, nếu có bất cứ thành phần đã bị hư hại, hãy ngừng sử dụng thiết bị, và liên hệ với trung tâm dịch vụ bảo hành gần nhất thay thế và sửa chữa các phụ tùng hư hay sự cố về máy.
Không tháo rời và tự sửa chữa sản phẩm để đảm bảo an toàn.
- 4 Nên sử dụng phụ tùng đi kèm với máy của chính nhà sản xuất cung cấp
- 5 Lắp ráp các bộ phận phải đúng, khớp và đầy đủ trước khi sử dụng thiết bị.

- ⑥ Không nhúng hoặc rửa máy vào nước hoặc chất lỏng khác, không sử dụng máy khi tay ướt.
- ⑦ Luôn tháo phích cắm khỏi ổ điện sau khi sử dụng, xin nắm đầu phích điện để rút ra khỏi ổ cắm điện, không nắm dây điện mà giật để khỏi hư dây điện.
- ⑧ Đừng tự ý sửa chữa nếu không biết rõ vì điện áp cao trong vỏ thiết bị.
- ⑨ Khi máy đang hoạt động, để tránh nguy hiểm không được dùng tay hay các vật lạ cho vào ống dẫn thực phẩm hay sử dụng các vật lạ khác để thay thế cho thanh nhồi, hoặc lơ là khi lấy thực phẩm ra khỏi máy.
- ⑩ Khi máy đang làm việc không được chạm tay vào bất kì bộ phận có thể tháo rời khỏi máy.
- ⑪ Khi thiết bị đang hoạt động gần trẻ em cần phải có sự giám sát chặt chẽ của người lớn. Tuyệt đối không cho trẻ em sử dụng thiết bị này.
- ⑫ Nếu dây nguồn bị hỏng thì phải do nhà chế tạo hoặc đại lý dịch vụ hoặc những người có trình độ tương đương thay thế nhằm tránh xảy ra sự cố.
- ⑬ Thiết bị này không thích hợp cho người tàn tật, thiếu năng trí tuệ, hoặc những người có kinh nghiệm và thiếu hiểu biết (kể cả trẻ em) trừ khi được giám sát hoặc hướng dẫn sử dụng thiết bị bởi người có trách nhiệm về sự an toàn của họ.

CHÚ Ý






- ① Trong suốt quá trình hoạt động nếu thiết bị đột ngột dừng lại, đó có thể do sự tác động hệ thống bảo vệ nhiệt cho motor. Nếu gặp trường hợp này vui lòng tắt máy và chờ trong vòng 20 đến 30 phút rồi cho thiết bị hoạt động trở lại.
- ② Ngắt điện trước khi vệ sinh hộc chứa bã.
- ③ Để tránh thiệt hại, tất cả các thành phần không được phép sử dụng với nước nóng trên 60°C hay lò vi sóng để khử trùng, các thành phần có tiếp xúc với thực phẩm đều phù hợp với các chứng thực thực phẩm FDA, sạch, an toàn cho sức khỏe, và đáng tin cậy.

- ④ Trước khi vận hành máy cần loại bỏ hạt, lớp vỏ dày và cắt nhỏ thực phẩm.
- ⑤ Không được vệ sinh thiết bị trong máy rửa chén.
- ⑥ Cần thận với lưỡi dao và các bộ phận cắt của thiết bị trong khi vận hành và vệ sinh.
- ⑦ Không vệ sinh thân máy trực tiếp bằng nước mà phải dùng khăn ướt, bàn chải mềm hay bọt biển để lau chùi nó.
- ⑧ Không được vệ sinh sản phẩm bằng tắm rửa bằng kim loại, chất tẩy rửa hay chất lỏng có tính ăn mòn (ví dụ như khí hay Acetone).
- ⑨ Thiết bị được thiết kế chỉ để dùng trong gia đình.

TRƯỚC KHI SỬ DỤNG

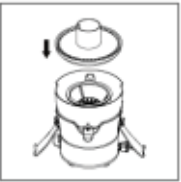
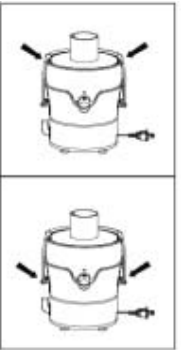


LẮP RÁP THEO HƯỚNG DẪN NHƯ SAU:

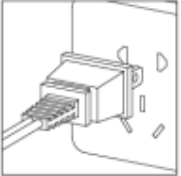
	1	Kéo dây nguồn ra khỏi hộc chứa bên trên để máy theo đúng chiều dài.
	2	Lắp bộ phận dẫn nước ép vào thân máy.
	3	Gắn chặt lưới lọc vào bên trong của hộc thu nước ép.

	4	Đậy nắp vào.
	5	Gắn chặt hai chốt khóa vào đúng vị trí.
	6	Đặt ca chứa nước ép vào đúng vị trí của vòi để tránh nước ép văng ra ngoài.
	7	Đặt thanh nhồi vào ống dẫn thực phẩm. Không được dùng tay hay các vật lạ khác cho vào ống dẫn hay sử dụng bất kỳ vật nào để thay thế thanh nhồi.
	8	Trước khi nối thiết bị với nguồn điện phải để nút điều khiển ở vị trí "0".

SỬ DỤNG MÁY

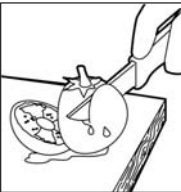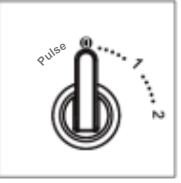
VẬN HÀNH MÁY THEO HƯỚNG DẪN SAU:

	9	Rau quả phải được rửa sạch và cắt thành khối vừa vận với ống dẫn (phải loại bỏ hạt, vỏ thực phẩm dày trước khi cho vào thiết bị).
	10	<p>Vặn về "0": tắt máy/ dừng hoạt động</p> <p>Vặn "Pulse": quay ngay, phù hợp cho việc đảo, trộn thực phẩm.</p> <p>Vặn "1": Tốc độ hoạt động thấp, để thực hiện cho những loại thực phẩm mềm như dưa, cà chua, dưa chuột, dâu.</p> <p>Vặn "2": Tốc độ hoạt động cao hơn, để thực hiện ép thực phẩm như sữa đậu nành, nước ép cà rốt</p>
	11	Cho trái cây/ rau quả vào ống dẫn thực phẩm.
	12	Đẩy thực phẩm xuống bằng thanh nhồi.

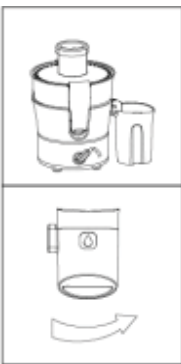	13	<p>Khi sử dụng xong đưa nút điều khiển về vị trí "0" và rút dây ra khỏi nguồn điện.</p>
---	----	---

HƯỚNG DẪN THÁO MÁY

TRƯỚC KHI VỆ SINH MÁY PHẢI THÁO RỜI MÁY THEO CÁC BƯỚC SAU:

	1	<p>Lấy thanh nổi ra sau đó mở khóa an toàn.</p>
	2	<p>Tháo nắp đậy / lưới lọc /hộc thu nước ép theo đúng thứ tự.</p>
	3	<p>Vệ sinh lưới lọc đúng cách bằng bàn chải chuyên dụng.</p>

BẢO QUẢN VÀ LƯU GIỮ THIẾT BỊ

- 1 Trước khi vệ sinh máy cần phải tắt máy và rút dây nguồn.
- 2 Vệ sinh máy ngay sau khi sử dụng.
- 3 Không vệ sinh phần thân máy trực tiếp bằng nước mà phải lau bằng vải ướt, bàn chải mềm hay bọt biển.
- 4 Giữ máy nơi khô thoáng và tránh ánh sáng trực tiếp.

SỰ CỐ VÀ GIẢI PHÁP

Sự cố	Biện pháp
<p>Máy không hoạt động.</p>	<p>Máy được thiết kế với hệ thống an toàn, nó không hoạt động khi một bộ phận không gắn chặt với nhau. Kiểm tra lại các bộ phận của máy chắc chắn đã được lắp đặt đúng, nhớ tắt máy trước khi kiểm tra.</p>
<p>Bộ phận motor có mùi lạ trong lần sử dụng đầu tiên.</p>	<p>Đây là hiện tượng bất thường. Nếu máy vẫn tiếp tục có mùi lạ sau vài lần sử dụng, kiểm tra số lần sử dụng máy và thời gian sử dụng máy.</p>
<p>Máy tạo ra nhiều tiếng ồn, có mùi khó chịu, quá nóng không thể chạm vào được, bốc khói...</p>	<p>Tắt máy và đem máy tới trung tâm bảo hành.</p>
<p>Lưới lọc chạm vào ống dẫn thực phẩm hoặc dao động mạnh suốt quá trình máy hoạt động.</p>	<p>Tắt máy, rửa sạch ống dẫn thực phẩm và lưới lọc bắt đầu vận hành số lượng ít hơn.</p>
<p>Lưới lọc bị kẹt.</p>	<p>Tắt máy, rút dây điện và kiểm tra lưới lọc đã đặt đúng vị trí trong phần thu nước trái cây chưa. Những vết nứt, vết rạn, lưới lọc bị lỏng hoặc những điều bất thường khác đều có thể làm máy hoạt động không ổn định.</p>

Ghi chú :

Nếu bạn không giải quyết sự cố bằng các giải pháp trên hãy liên lạc với trung tâm dịch vụ bảo hành để sửa chữa.

KHÔNG ĐƯỢC TỰ CHỈNH SỬA SẢN PHẨM**CHUNG TAY BẢO VỆ MÔI TRƯỜNG**

Hãy tuân thủ những quy định bảo vệ môi trường của địa phương: đem những thiết bị điện không còn sử dụng đến trung tâm xử lý chất thải phù hợp.

BlueStone

Model
JEB-6519

User manual

Juice Extractor



Fine Stainless steel 304 filter basket and safety for user.

Patent axis grinding design, the juice rate has increased.

Morden design with high quality motor.



Always keep manual for your safety

CB

SPECIFICATION

Model: JEB-6519

Voltage: 220V/50Hz.

Power: 250W

Rotation speed: 21000 times/min

Standard Compliance

BlueStone products are manufactured under the Standards and the technical rules for product safety design and testing.

BlueStone products and associated accessories intended for professional, industrial-process under CB Standard and have been successfully tested on areas: sampling test, assembling test, and lot test.

Trademark

BlueStone manufactured products are based on the consultation by Great American Appliance (GAA Corp) a company incorporated and existing under the laws of United States of America under Certificate of Incorporation No. 3089043 in the secretary office located in the state of California in Michigan, Ave Oakland, CA 94605, USA.

Industrial design


BlueStone provides products with industrial design and color variations offering a broad range of possibilities for customers. Through the experienced designers and technicians, BlueStone design has highly reliable solutions so the customers are assured of quality designed systems that meet stringent industry and international compliance regulations.

After sales service

After sales service is considered by BlueStone as a major concern for our customers. With such, we provide our BlueStone products with a 2 years guaranteed warranty that help our end user feel at ease.



GENERAL DESCRIPTION

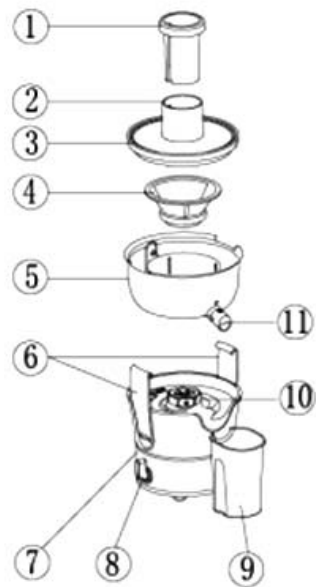

1	Feeding rod
2	Food opening
3	Upper cover
4	Filter
5	Juice collection tray
6	Locker
7	Main body
8	Switch
9	Juice mug
10	Transmitter
11	Juice out flower

WARNING

- ❶ Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance
- ❷ Please make sure to cut off the power when dismantle, install or debug the appliance.
- ❸ Before operating the appliance, please check the cord or plug, blade, filter and other components, if any component has been damaged, please discontinue use the appliance, and contact nearest service center for replacing any damaged parts. Please don't disassemble and repair by yourself for safety.
- ❹ Never use any accessories or parts from other manufactures.
- ❺ Assemble all parts rightly and completely, before using the appliance.

- ❻ Never immerse the appliance in water or other liquids or come into contact with them. Do not use it with wet hands.
- ❼ Always unplug the appliance after using. Do not unplug by pulling on the cord.
- ❽ Do not repair by yourself if you are unclear about this appliance because of high voltage inside.
- ❾ When the appliance is working, it's forbidden to put your hand or other object into food opening, or use any object replace the feeding rod, or close your eyes to the feed opening to prevent accident.
- ❿ Don't touch any removable parts when it is working
- ⓫ Close supervision is necessary when the appliance is operated near children. Do not allow children to use this appliance.
- ⓬ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ⓭ The appliance is not intened for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning of the appliance by a person for their safety.




CAUTION






- ❶ If the appliance stop to work during it is working, it maybe because of the temperature protector of the motor, please shut down the power and wait for 20-30 minutes.
- ❷ Shut down the power before cleaning the residue mug.
- ❸ In order to avoid damage ,all the component are not allowed to use hot water over 60 °C or microwave heating for disinfection, the components which contact food conform to the FDA food authentication, clean, health, and reliable.
- ❹ Please remove nuclear, hard seeds, thick skin or scale of fruits and vegetables before operating.
- ❺ Don't clean this appliance in dishwasher.

- ⑥ Maximum care with the knife and other cutting parts of the appliance during operation and cleaning.
- ⑦ The main body is not allowed to clean with water directly; wet cloths, soft brush or sponge can scrub it.
- ⑧ Don't use steel velvet, abrasive cleansers or corrosive liquid (for example Gas or Acetone) to cleaning this appliance.
- ⑨ This appliance is intended for household use only

BEFORE OPERATION

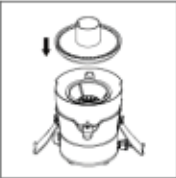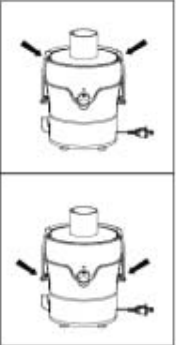



ASSEMBLING AS FOLLOW:

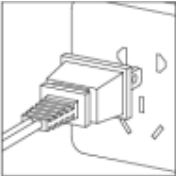

	<p>1</p>	<p>Take out the required length of cable from the cable tidy on the base of the juicer</p>
	<p>2</p>	<p>Assemble the juice out flower into main body</p>
	<p>3</p>	<p>Put the filter into the collection tray and secure tightly</p>

	<p>4</p>	<p>Place the upper cover into the main body.</p>
	<p>5</p>	<p>Assemble the locker rightly and completely.</p>
	<p>6</p>	<p>Place the juice mug under the spout to avoid juice splash.</p>
	<p>7</p>	<p>Put the feeding rod into the feeding tube. It's forbidden to put your hand or other object into feeding tube, or use any object replace the feeding rod.</p>
	<p>8</p>	<p>Connect the device to the mains supply (please keep the switch "0" before this step)</p>

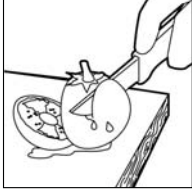USAGES




OPERATING AS FOLLOW:

	9	<p>Clean fruit& vegetables, cut to appropriate blocks. (please remove nuclear, hard seeds, thick skin or scale of fruits and vegetables before operating.)</p>
	10	<p>"0" shift: turn off, stop. "Pulse" shift: grade, instant rotate, suitable for fast overturning material. "1" shift: lower speed grade, making soft fruit and vegetable when extracting, such as melon, tomato, strawberry. "2" shift: higher speed grade, suitable for extractor such as soybean milk, carrot juice.</p>
	11	<p>Put fruits/vegetables into feeding tube.</p>
	12	<p>Push fruits/vegetables gently by using the feeding rod.</p>

	13	<p>When finished, please put the switch "0" and shut down power supply.</p>
		

DISMANTLE

BEFORE CLEAN THE APPLIANCE, PLEASE DISMANTLE IT AS FOLLOW:

	1	<p>Take off the feeding rod, open the locker.</p>
	2	<p>Remove the upper cover/ Filter/juice collection tray in tune.</p>
	3	<p>Clean the blade unit carefully and thoroughly using the brush.</p>

MAINTERNANCE AND STORAGE

- ① Please make sure to put the switch off and shut down the power before clean the appliance.
- ② Please clean the appliance at prompt time after using.
- ③ The main body is not allowed to clean with water directly; wet cloths, soft brush or sponge can scrub it.
- ④ Please keep the appliance dry and avoid the ultraviolet radiation when storing.

TROUBLE SHOOTING

Problem	Solution
The appliance does not work	The appliance is equipped with a safety system. It will not work if the parts have not been mounted properly. Check whether the parts have been assembled in the right way, but switch off the appliance before you do so.
The motor unit gives off and unpleasant smell the first few times the appliance is used.	This is not unusual. If the appliance times, check the quantities you are processing and the processing time.
The appliance makes a lot of noise, gives off an unpleasant smell, and is too hot to touch gives off smoke.	Switch the appliance off and unplug it. Check with the service center
The filter touches the feeding tube or vibrates strongly during processing.	Switch the appliance off, clean the feeding tube and the filter and process a smaller quantity.
The filter is blocked.	Switch the appliance off and unplug it. Check if the filter has been property placed in the juice collector. The ribs in the bottom of the filter should fit properly onto the driving shaft. Check if the filter is damaged. Cracks, crazes, al loose grating disc or any other irregularity may cause malfunction.

Note:

If You can't solve the problem by above method, please contact with a qualified technican or after sale service center for repair.

DO NOT TRY TO ADJUST OR REPAIR THIS APPLIANCE BY YOURSELF

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to appropriate waste disposal center.